


AIRTEQ www.Airteq.com

5030D/5036D SERIES DEADLOCK

030D/5036D 4/29/16

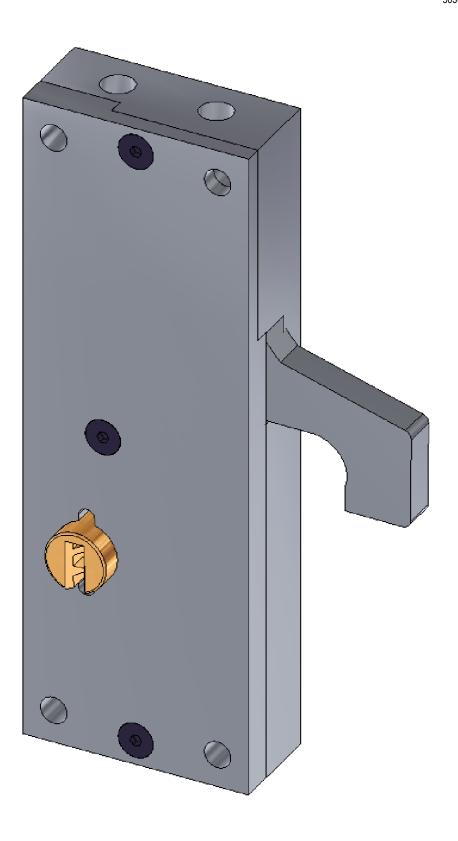




AIRTEQ www.Airteg.com

5030D/5036D SERIES DEADLOCK

5030D/5036D 4/29/16

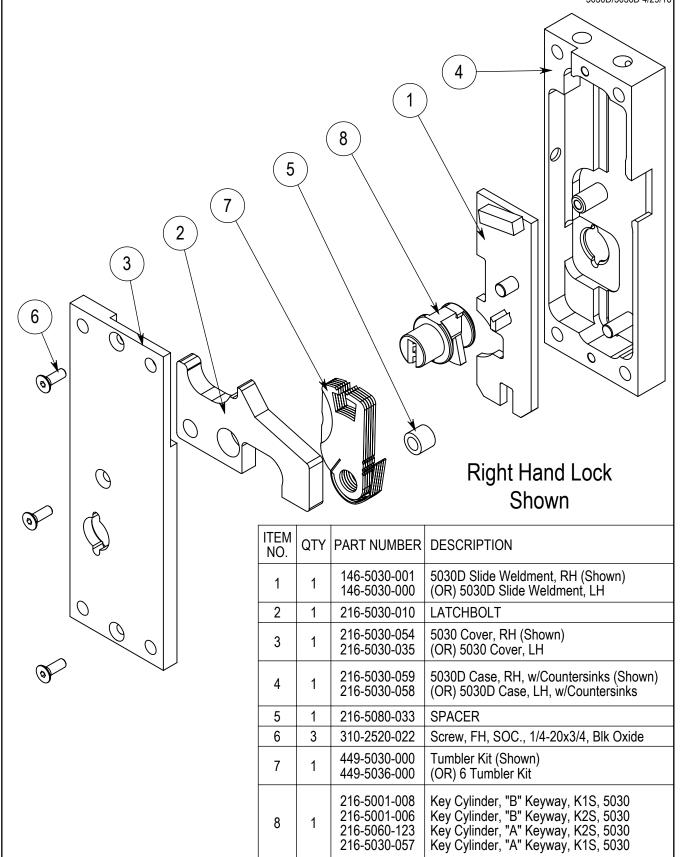

216-5001-006

216-5060-123 216-5030-057

8

1

MAINTENANCE INSTRUCTIONS AIRTEQ MECHANICAL LEVER TUMBLER LOCKS

All Airteq mechanical lever tumbler locks are designed for years of trouble-free use. No periodic maintenance or lubrication is recommended. If, however, a lock fails to perform properly, the following procedure is recommended.

- 1) Remove the lock cover.
- 2) Carefully remove the tumbler stack. Mark each tumbler position on the tumbler with a permanent marker for ease of reassembly.
- 3) Remove the remaining components.
- 4) Clean the case, cover and other components with alcohol or acetone and a clean lint free cloth.
- 5) Lightly lubricate the following areas with a multi-purpose synthetic lubricant with teflon, similar to "Synco Super Lube with Teflon":
 - a) All machined surfaces at the bottom of the lock case.
 - b) The I.D. of the key cylinder hole in the case.
 - c) The I.D. of the key cylinder hole in the cover and the counterbore around it.
- 6) Carefully reassemble the lock. Be sure that the tumbler stack has been properly reassembled.
- 7) 5070 Series locks only:

Lubricate the surfaces where the actuator pawl and slide weldment interface.

WARNING:

- 1) Never use WD40 or similar silicone based lubricants.
- 2) Never use graphite powder as a lubricant.
- 3) Never lubricate the lever tumblers.

KEYS AND LEVER TUMBLERS

- 1) Key wear can cause improper operation of the lock and may damage the lock's lever tumblers. Keys in constant use should be periodically compared to a similar new key. When grooves due to wear are noted in the steps on the key bit, the old key should be replaced.
- 2) When rekeying is performed, new tumbler stacks should be purchased as a set including a new key. This enables Airteq to maintain complete keying records.